

Product Information

Product Name: Block Quick Timer
Product Type: TMR627
Warking Voltage: 4.5V(3 AAA batteries)

Product Introduction.

- 1. The time is selected directly by pressing the button, which is simple and convenient to operate
- 2. Multi-press combination timing, unique design to meet various time needs
- 3. Simple shape, easy to clean
- 4. It also has the function of countdown timer
- 5. LED display, suitable for multiple scenes

Buttons Description

Start/Pause Buttons		Start or pause the timing task
Reset Button		after the timing is paused, press this button to reset the current timing task
Number Button	25	Edit the countdown duration

Operating Instructions

Countdown
1. There are 12 digital buttons in this machine, "10" represents 10 seconds, and the others representing minutes. The countdown time can be set by the combination of numbers, for example, to set 20 minutes and 20 seconds, you can press "20" once and "10" twice or "5" four times and "10" twice, etc., The maximum supported duration is 199 minutes and 50 seconds , if the input is wrong, press the "reset button" to re-set and re-enter;
2.During the timing process, except for the "start/pause button", other buttons are not available. After pausing, press the digital button you can add time based on the remaining time in the countdown, for example, if there are "05:20" remaining and you press "1", it will become "06:20"
3.After the countdown, the buzzer will make a "beep" sound and the screen will flash (if it is muted, then only the screen will flash). Press any key to terminate the alarm.

Stopwatch
1.Directly press the "Start/Pause Button" from the "00:00" state to enter stopwatch mode, with a maximum support of 199 minutes and 59 seconds.
2.During the timing process, all keys are not available except the "Start/Pause Button". After pausing, press the reset button to reset the timing to zero.

Precautions

- 1.Make sure you use high-quality batteries and avoid using different types or mixing old and new batteries
- 2.When non-use for a long time, remove the batteries to prevent leakage damage to the product. Avoid disassembling the product or changing the internal circuit by yourself to prevent potential safety hazards. If you encounter any problems, contact the after-sales service for inspection and maintenance
- 4.Don't use this product in high temperature or high humidity environments.
- 5.Don't rinse the product with water, otherwise it will cause a short circuit

Environmental Disposal

This logo on this product or instruction manual or packaging indicates that this product is about to end its useful life and cannot be treated as general household waste. Please consult your local government for recycling disposal according to waste classification. Before discarding the appliance, the batteries must be removed from the appliance. The appliance must be powered off before removing the batteries. Dispose of the batteries in a safe place.